## Quick Installation Guide for Nadir Adapter on M1L




**4.** Attach MFVR-170C to the nadir adapter. Slide it to the right or left until it is stopped and flush to the nadir adapter. Tighten the clamp on MFVR-170C.

**5.** Tighten the knob of nadir adapter fully. The knob is spring loaded. Pull it out to adjust to more convenient angles as needed.



3. Install a M3 socket head screw (head machined to 5mm) to the central socket at the bottom of MFVR-170C. This screw now acts as a stop.

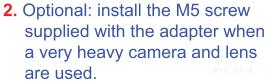

1. Install the nadir adapter at the end of lower rail, opposite to the bubble level, using two M5 screws (with brass fitting) shipped with the rail.



